Phone: **09 415 3333** Email: sales@hiq.co.nz Web: www.hiq.co.nz


Screw Mount U Clamp
This low profile mount is ideal when space is an issue


Ideal for mounting bundles in corners or along edges.

| Part<br>Number | A   | В    | С   | D   |
|----------------|-----|------|-----|-----|
| 20-HURCS-2-01  | 6.2 | 15.0 | 3.2 | 4.3 |
| 20-HURCS-3-01  | 7.1 | 15.6 | 4.8 | 6.1 |
| 20-HURCS-4-01  | 8.1 | 18.3 | 6.4 | 7.6 |

Material: Nylon 6/6 Natural







## **Spring Clips**

Spring retention of cables, tubing, wire bundles, flat cable, panels, spare components or tools


| Part Number | L<br>mm | W<br>mm |
|-------------|---------|---------|
| 20-PFC03    | 33      | 9.5     |
| 20-PFC08    | 39      | 12.7    |







Material: Nylon 6/6 Natural

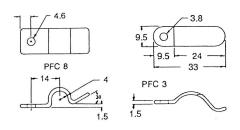

## Cable Tie Markers

Used to mark cable bundles for identification

| Part Number | L<br>mm | W<br>mm | T<br>mm |
|-------------|---------|---------|---------|
| 17-PMT16    | 26      | 15.2    | 1.2     |
| 17-PMT20    | 42.2    | 21.2    | 1.2     |

Material: Nylon 6/6 Natural







